 


Portable Lollipop HD Recorder User Guide

Please read this user guide carefully before use

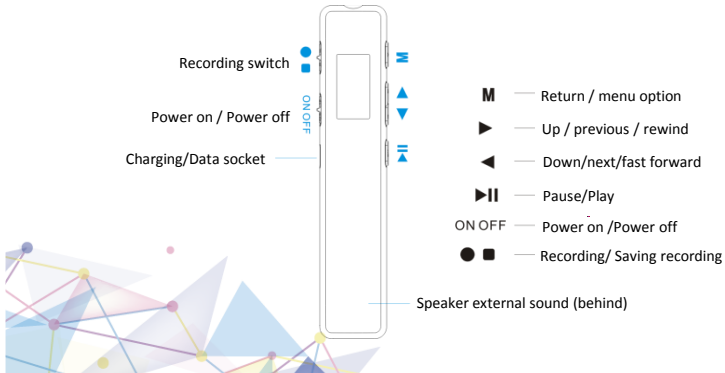

Power on/ Main Menu

Push the key to the ON position, press ◀ / ▶ to select the desired option and press ►| to confirm.

Music	Play digital audio tracks
Record	Play video file/Recording setting
E-book	Reading e-books
Set	Custom machine settings
Play	Access to the play interface directly(when playing)

Music

All songs	List all songs in alphabetical order
Artists	List tracks by singer
Album	List tracks by album
Genres	List tracks by style
Playlists	View playlist tracks
Create playlist	Re-search all songs and create list

A Find Music

According to the above classification , press ◀ / ▶ to find , press ▶|| to select the desired music file to play.

B Play music

Select the music file which you found,

Play/Pause : press ▶|| to play/pause ,

Play switch : press ◀ / ▶ to switch up and down , long press ◀ / ▶ make fast forward and backward,

Music setting : long press M to enter music setting , press ◀ / ▶ to select , press M to back,

Adjustment Vol : Adjust the volume via [Music Settings > Sound Settings > Set Volume].

C Music setting

Long press M from the play interface to [Music Settings].

Play mode	different play modes
Sound settings	different playback effects
Join list	add the songs that are playing to a separate playlist
Move out of the list	move the song being played out of the playlist
Delete	delete the song being played

C1 Play Settings

Repeat play	select repeat mode
Shuffle	Shuffle all songs in the current list
Repeat Settings	Repeat Times / Interval Settings

C11 Repeat play

Press ◀ / ▶ and ▶|| select the desired option.

Repeat play off	turn off repeat play
Single repeat	single loop
Repeat all	repeats all songs in the current list
Browse and play	switch the next song after the first 10 seconds of each song

C12 Repeat setting

Press ◀ / ▶ and ▶|| to select the desired option.

Repeat mode	Open repeat mode
Number of repetitions	The number of times the current song is played repeatedly
Repeat interval	Repeat interval (seconds)

Repeat operation:

- 1 : Set the number of repetitions and the repetition interval first.
- 2 : Turn on the repeat mode. A is beating in the middle of the playback interface, . Press ◀ to confirm repeating point A. The screen will have B beating, and then press ◀ to confirm repeating point B. Start repeating the selected content.
- 3: After the re-reading, the screen will appear again A is beating, repeat step 2 to repeat again.

Note: Do not press other buttons during the repeat process, otherwise the repeat mode will be exited.

C2 VOL Settings

C21 Set the volume

Press and to select the desired play volume.

C22 Equalizer

Choose a different play effect <Rock / Funk / Hip Hop / Jazz / Classic / Electronic / Custom > Listen to music.

C23 Variable speed play

Press ◀ / ▶ and ▶|| to select the desired play speed.

C3 Join list / move out list

Add songs to the list of categories or move them out.

C4 Delete

Delete the song that is playing. Select "Yes" from the pop-up interface and confirm to delete.

Recording

Recording library	Browse play audio files
Recording settings	Custom machine settings

A Recording

During the power is on, turn the switch to ● , the machine starts recording, press ▶|| to pause/continue recording, switch back ■ , save the recording.

B Play recording

Enter the recording library, select the recording file, press ▶|| to start playing, and operation same as play music.

C Recording settings

Recording format	MP3 format - general effect, compression processing, small memory space
WAV format	good effect, no compression processing, taking up a lot of memory space
Bit rate	set the resolution of the recording, the bigger the bit rate, the better the effect
Voice control mode	voice control is recorded with sound, no sound is not recorded, to save memory
Translation mode	files recorded in translation mode can be translated using translation tools
Listening mode	the monitor can be plugged in while listening to the earphones (can be used as a hearing aid)
Timed Recording	Set the period of the timed recording and the time of the start/end recording
Recording Segmentation	Sets the duration of a single recording file (automatically recreates a new file after the time has elapsed)
MIC sensitivity	the higher the registration, the more sensitive, the more details recorded
Recorder	Microphone (local recording) / audio input (audio line recording)

C1 Timing recording

To use this function, you need to synchronize the machine time first.

1: Set the start time and end time, press ◀ / ▶ to adjustment time, press ▶|| to change setting item, set to the last item, press save to modify ,

2: Set the timing period, record it every day or only once ,

3: Enter the time switch, select On, press ▶|| Save to modify.

C2 Recording segment

Machine recording defaults to 5 hours to save a file. You can set the duration of a single recording file by yourself. Press Select (1mins for 1 minute) and press confirm to save.

C3 Audio recording

1: Set the recording source to select line-in.

2: Plug one end of the audio cable into the machine and plug one end into the source.

3: Recording can be done through the audio cable when recording is turned on.

E-book

Select the desired book, press ◀ / ▶ to scroll up and down, and long press M to enter the menu.

Playing	transfer to the song interface that is playing
Auto play time setting	set the time to read the page automatically
Delete eBook	Delete eBook
Bookmark Selection	Select the added bookmark to transfer to that location directly
Delete bookmark	delete added bookmarks
Add bookmarks	add bookmarks, mark them and read them directly after reading them next time
Page selection	transfer to the specified number of pages directly

Auto play: After setting the auto play time (default 5 seconds), return to the e-book, press ▶|| start, auto play (there will be signs ▶ in the upper left corner), press ▶|| to end auto play.

Setting

display setting	Set brightness / backlight time / screen saver
Date and time	Set date and time
Set password	Set the power-on password
Timed shutdown	How long does it take to shut down automatically (minutes)
Language settings	Change the language you need
System message	Firmware Information and Disk Information for the Machine
Data emptying	Format all data (please back up your data)
Factory setting	Restore factory settings (password will also be restored to default)
Auto update	Upgrade firmware automatically , update program

A Display setting

Contrast:Set the brightness of the screen display, press ◀ / ▶ to select the appropriate brightness, press confirm,

Backlight timing:Set the time when the machine malfunctions and enter the extinguishing screen. Press ◀ / ▶ to select the required time and press ▶ confirm.

screen protector:Set the display after the machine screen is off

B Date and Time

Set time: Enter the time setting, press ◀ / ▶ to adjust the time, press ►► to change the setting item, set to the last item and press ►► to save the modification.

Set date: Enter the date setting, press ◀ / ▶ to adjust the date, press ►► to change the setting item, press ►► to save the modification.

C Set password

After selecting "On" for the password switch, you need to enter the correct password to operate the machine when you turn it on.

Password modification: You need to enter the old password (000) first, press ◀ / ▶ to adjust the number, press ►► to change the setting item, confirm the new password, and continue press ►► to save and modify.

D Timed shutdown

Set the machine auto power off time, press ◀ / ▶ to select the desired time, 1 Mins is 1 minute, press ►► to confirm.

E Language settings

Set the machine display language, press ◀ / ▶ to select the desired language, and press ▶|| to confirm.

F System message

Version information :you can browse the version information of the machine.
Disk space:you can browse the disk space and usage of the machine.

G Data emptying

Remember to use this feature after saving important files. Use this feature when the machine has a problem or wants to clear the data.

H Factory setting

Restore the default factory settings, this function will not affect the data files inside the machine. (The password will be restored to the initial password of 000)

I Auto update

Download the firmware on the Internet and save it to the machine. Click on the automatic upgrade to update the program automatically.

Power off

Push the key to the OFF position to power off.

Function parameter

product type	Lollipop HD Recorder	Resolution	LCM 64*96
Battery	Environmentally friendly polymer lithium battery	Frequency response	20Hz-20KHz
Charging time	Around 1.5 hour	Distortion	<0.008%
Record format	WAV/MP3	Signal to noise ratio	>90db
Music format	MP3,WMA,OGG,APE,FLAC,WAV, AAC-LC,ACELP	Sample arte	48KHz
Weight	67g	Size	115*25*11(mm)

Charging precautions

1. When connecting to the computer while charging, push the switch to the ON position.
2. Please use the power adapter with a charging current of 1A or less to charge it, otherwise it may damage the unit or Dangerous (this product does not come standard with a power adapter).
3. It is recommended to connect the unit to the computer with a USB cable.
4. After the charge is full, the charging symbol is full and stops beating.

Troubleshooting and troubleshooting

1.Suddenly unable to record

Please back up the important files first, and format them on the machine. If they are formatted, they can be used normally. Please clean up the computer in time. This is a computer virus infected with MP3, which makes MP3 unable to use. It may take a long time. The machine is damaged and cannot be repaired.

2.The display does not respond or is always lit in an abnormal state

Please back up important files first, then restore the factory settings. After connecting to the computer, click on My Computer, find the mobile drive letter, right click the mouse, select Format, and then select Quick Format. This will allow you to complete the factory reset and most of the faults can be eliminated.

3.No response after connecting to the computer via the data cable

First check if the plug is in place. If the computer still does not respond, try to switch to a different computer connection. Some computers cannot be recognized because of the lack of a driver. If you still can't identify it after you try it, you can contact after-sales upgrade or after-sales service.

Warranty card

Product number:

Warranty period:

Cause of issue:

Dealer:

Phone:

Client's name:

Contact number:

Note:

- ★ Do not place this product in a heating device or in a high temperature environment.
- ★ Please use the charger with a current of 1A or less to charge the computer.
- ★ This product uses flash memory to store data, please backup the required data on the computer or other storage devices in time. If the product is damaged or cannot be read/recognized, the company is not responsible for the loss of data.