

TIPS:

- 1. Press the Mode switch 3 seconds in any mode to disable the audio alarm sounds, indicator will flash 3 times.
- 2.Device Charging: When plug in power, battery indicator is always on and off when fully charged.


RF BUG DETECTOR for Wired/Wireless hidden cameras, GSM listening devices, GPS trackers.

User Manual(Mar, 2021)

The RF Bug Detector is for personal privacy protection. The bug camera and GPS detector included help assist in sweeping the surveillance devices. Locate hidden cameras, listening devices or GPS trackers that could be invading your private space at home, the office or vehicle. It's portable and tiny for along carry in handbag, key chain, suitcase or briefcase.

Usage area: Hotel AirBnB Apartment Dressing room
Public toilet Gym Cars

Product structure

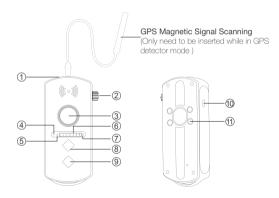

- (1) GPS detector port (2) Knob switch (3) View finder (4) GPS detector indicator
- (5) Wireless detector indicator (6) Frequency indicator (7) Battery indicator
- (8) Lens finder switch (9) Wireless/GPS detector mode switch (10) USB port
- 11 Infrared LEDs

4

- 1

In the box:

1 x RF bug detector

1 x User manual

1 x USB cable

1 x GPS magnetic signal scanning

1 x Test lens

Wireless Signals detect



How to detect the wireless signals?

(Wireless Signals Detector)




While the knob switch is ON, wireless Signals detect is auto ON.(The knob switch is also for adjusting wireless detector's sensitivity)

① Turn the knob switch to maximum value

Then move back till wireless detector indicator only shows one led blinking and move it close to suspicious objects or directions. If there are working wireless devices shows above, the indicator, speaker and vibration will work at the same time according to its signal strength of wireless devices

How to detect the GPS tracker? (GPS Detector)

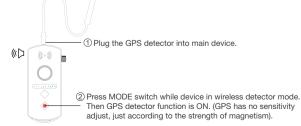


How to detect the hidden cameras? (Lens Detector)



 ② One press the lens finder switch to start, look through the view finder and slowly scan the room' suspected area to look for any cameras; (Press the lens finder switch to change the speed flashing LEDs.)





③ The lens of the hidden cameras will appear as a bright red point of blinking light when you illuminate it with the light beam;

(4) Long press lens finder switch 3 seconds to turn off the lens detector.





2

3