

Portable compact voice recorder MP3 player user's guidance

Please read this user guide carefully before use

★If you want to read the data, please be sure to use the original data cable★

(Other data lines may not be connected properly)

This machine must be charged with 5V voltage, if 9V fast charging is used, it may cause the machine to burn out

Schematic diagram of machine switch



ON



OFF

Recording/On

Save recording/off

Recording

Recording: Without plugging in headphones, push the switch to the ON position to enter the recording state;

Save: Push the switch to the OFF position to save the recording file and power off.

Check the recording status: When in the recording status, long press the "+" or "-" key and hold them, then the light flashes a few times to prove that the recorder is working.

Note: During the recording process, do not connect to the computer, otherwise the recording file will be lost by mistake.

Play

Music/recording playback


Plug in the earphones and push the switch to the ON position to enter the music playback state. Short press the "-" key to switch between music and recording playback; meanwhile, press the "+" and "-" keys to pause playback (flashing red and blue light), and press the "+" key or "-" key lightly to exit the pause.

Volume adjustment/track switching

During the playback state, long press the "+" key or "-" key to increase or decrease the volume. During the playback state, press the "+" key to switch to the next song.

Time function (optional)

Change the system time and connect the machine to the computer. Enter the disk, you can see a folder named <recorder time synchronization tool>, copy this folder to the desktop, open the folder, double-click <recorder time synchronization tool>, it will appear as shown in the figure, confirm whether the computer time To be accurate, click <SetTime>, as shown in the figure appears, indicating that the time synchronization is successful.

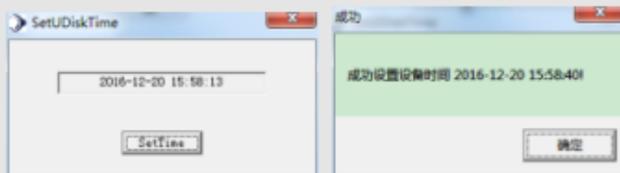

To format the machine, Please backup this folder, Prevent loss.

Expand function

Delete Files

During the playback state, press the "+" and "-" keys at the same time to enter the pause state (the light flashes red and blue), and long press the "+" or "-" key to delete the currently playing file (flashes blue light quickly), Press the "+" and "-" keys at the same time to delete all files (flashing red light quickly). Note: Play recording status means delete all recordings, and play music status means delete all music.

Fast forward and rewind

Plug in the earphones, push the recorder to the ON position first, press and hold the "-" button, and release it when you hear the sound. At this time, long press the "+" button to fast forward, and long press the "-" button to rewind.

Note: If you need to use it, you need to set it every time when you power on.

Voice activated recording

Without plugging in the earphones, push the switch to the ON position. After the red light is on, press and hold the "-" key. After flashes the blue light several times quickly, release your hand to turn on the voice-activated recording. Push it to the OFF position to save the recording file and power off. Note: If you need to use it, you need to set it every time when you power on.

Recording while charging

Connect the computer or charger, when the red light flashes or the blue light is on, push the switch to the ON position, press and hold the "+" key or "-" key (releasing your hand after 5 seconds), the red light flashes off, and then enters the status charging. While recording, push to the OFF position to save the recording file and power off.

Listen while recording/hearing aid function

Without plugging in the earphones, push the switch key to the ON position. After the red light is on, press and hold the "+" and "-" keys at the same time. After the light is off,

release your hand, plug in the earphones and you can listen while recording. Push it to the OFF position. You can save the recording file and power off.

Function parameter

product type	Mini voice recorder	4GB	Can save 48 hours recording files
Recording method	Turn on - recording, Turn off - save	8GB	Can save 96 hours recording files
battery	Environmentally friendly polymer lithium battery	16GB	Can save 192 hours recording files
Charging time	About 1 hour	32GB	Can save 384 hours recording files
Recording format	WAV	Recording bit rate	192KBPS
Play format	MP3/WMA/WAV	Sampling Rate	48KHz

Machine charging

1. Use the **original data cable** to connect the machine directly to the computer or charger for charging.

It is recommended to connect the unit to the computer for charging.

2. Please use a power adapter with a charging **current of 1A or less** for charging, otherwise it may damage the machine or cause danger (this product does not have a standard power adapter).

3. During the charging state, the voice recorder flashes red light; Fully charged state, it will always blue light on.

Notes:

1. When charging or connecting to a computer, reset the switch first. When unplugging, wait for the light to turn off before using it.

2. After recording, regardless of whether the recorder is powered or not, you must put the switch to off position to save the recording file, otherwise the recording file will be lost.

This machine comes with an intelligent reset system, please save the recording file before connecting to the computer. Since the recording effect and sound quality of this product are relatively clear and the parameters are relatively high, the recording file is relatively large, please extract it in time. The company is not responsible for the loss of data.

It cannot record Suddenly

Please back up important files first and format them on the computer. If they can be used normally after formatting, please clean up the computer in time. This is a computer virus infection of the voice recorder, causing the voice recorder to be unusable. It will cause damage to the machine beyond repair after a long time .

The indicator light does not respond or keeps on in an abnormal state

Please back up important files first, and then restore the factory settings. After connecting to the computer, click My Computer, find the mobile drive letter and right-click the mouse, select Format, and then select Quick Format. In this way, the factory reset can be completed, and most of the faults can be eliminated.

No response after connecting to the computer

First check whether the plug is inserted in place. If the computer still does not respond, try to connect to a different computer. Some computers cannot be recognized because of lack of drivers. If you still cannot recognize it after trying, you can contact after-sales upgrade or after-sales service.