
Detail View

!! CAUTION !!

THIS PRODUCT IS A PRODUCT THAT STARTS NORMAL SHOOTING IMMEDIATELY WHEN THE POWER IS TURNED ON.
WHEN CHANGING TO WIFI MODE, PLEASE CHANGE THE MODE DURING NORMAL SHOOTING.

Product video manuals can be found in the data room on the Damoacam website.



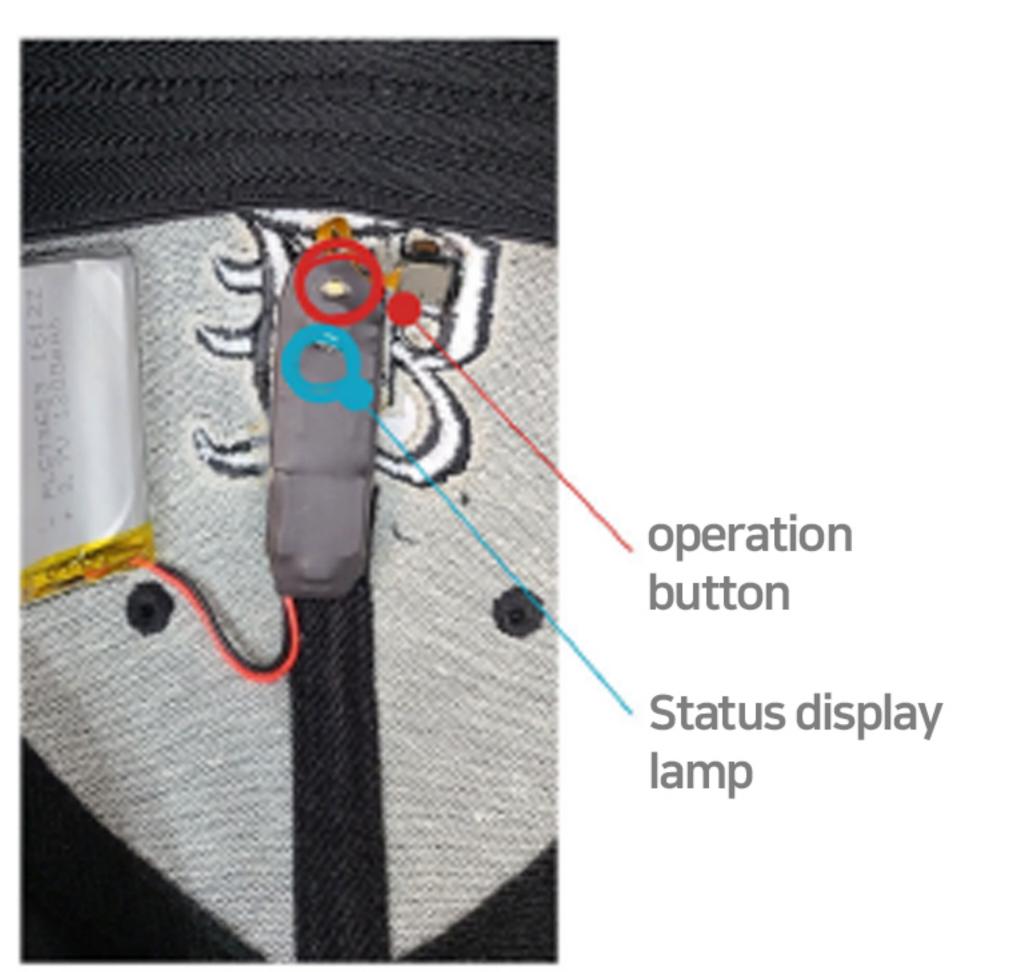

01 FILMING

Start filming

When you press the operation button for 3 seconds, the blue lamp turns on. After 10 seconds, it blinks 4 times and normal shooting begins.

change wifi mode

During normal shooting, press the operation button twice.
The blue lamp blinks quickly and then turns off, changing to wifi mode and taking pictures.

Stop filming

When you press the operation button once, the blue lamp lights up for a moment and then blinks. If you press the operation button for 4 seconds while the blue lamp is blinking, the blue lamp turns off and the product turns off.

It becomes OFF.

* Please note that product power can only be turned off in normal mode.

02 CHECK DATA

To check data, remove the SD card from the product and connect it to the included reader.

PRODUCT CHARGING

To charge the product, use the included cable for 2 to 3 hours.


PRODUCT RESET


- 1. Turn on the power, turn on the lamp, and press the operation button for 5 seconds when the red lamp blinks in normal shooting mode.
- 2. The red lamp blinks while you press it, and then the red lamp becomes fixed for about 10 seconds. At this time, release your hand from the button.
- 3. The fixed red lamp blinks quickly and switches to normal mode by pressing the operation button twice in succession. At this time, turn off the power.
- 4. When you turn the power back on, the product will be initialized.

HOW TO SET UP WI-FI






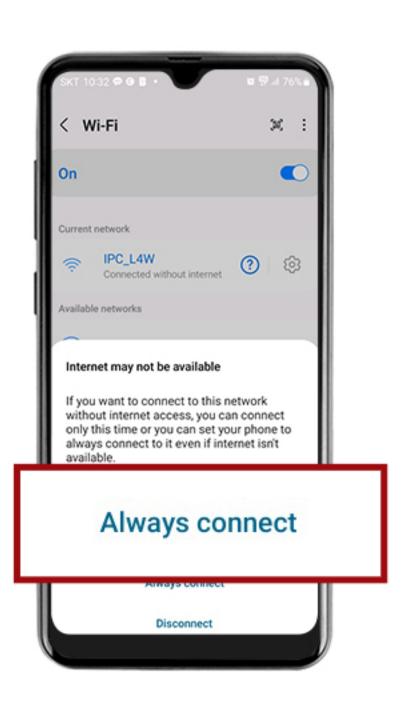


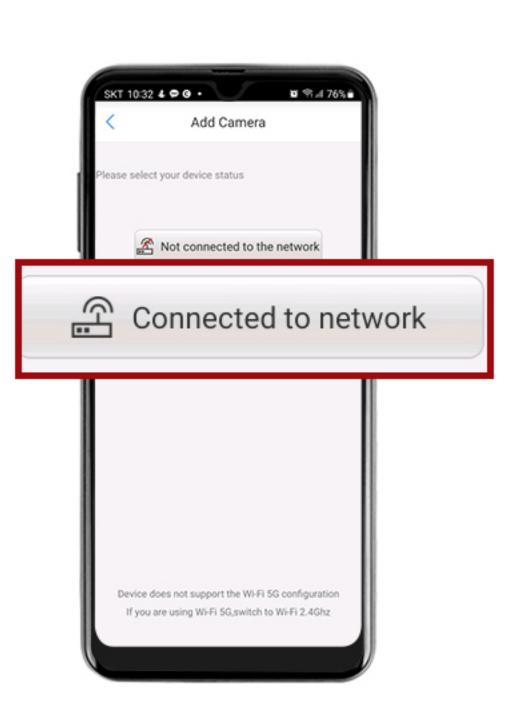







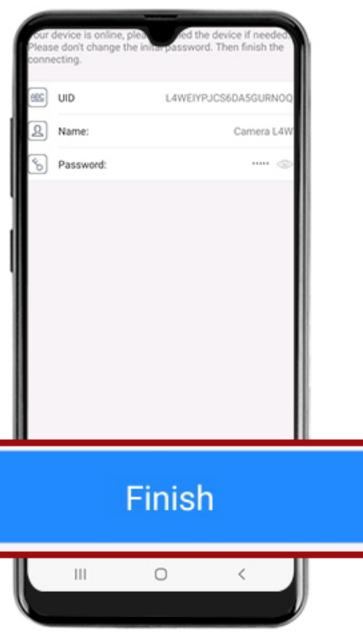


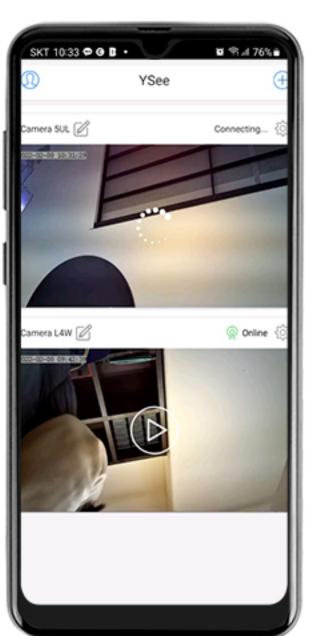




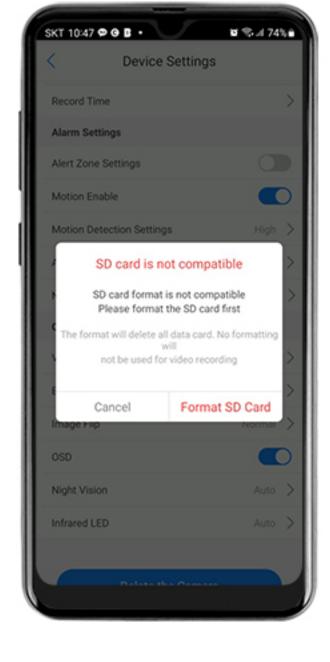

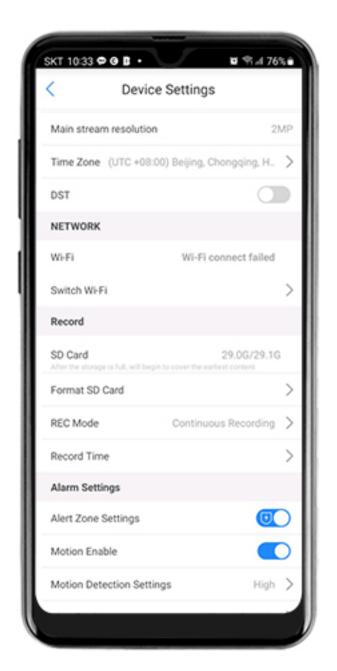

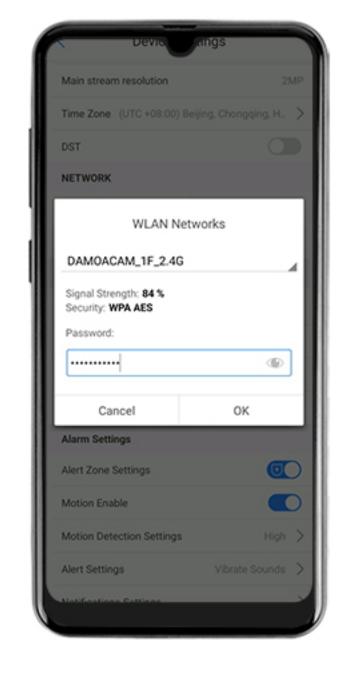

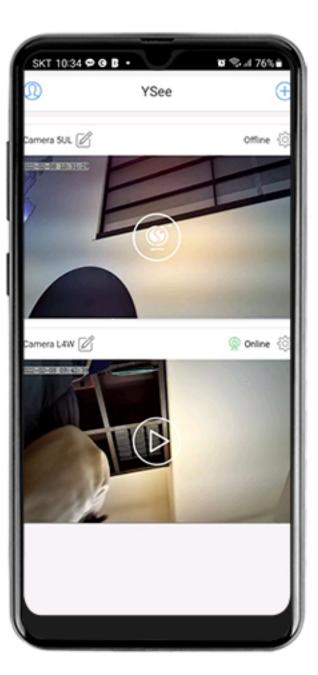

64g or larger sd card only

CAUTION!

- · After receiving the product, please fully charge it before operating it.
- · Because it is a small electronic product, some heat is generated when charging or taking pictures.
- · When disconnecting after recognizing the USB, please safely remove the mobile disk before disconnecting.
- · Damoacam does not take legal responsibility in case of infringement on other people's privacy or use for illegal purposes.

Manufacturer: Damoacamco., Ltd.

Shopping mall: WWW.DAMOACAM.COM Home page: WWW.DAMOACAM.CO.KR



DMCC200FHDW

