


# Portable fashion Video Recorder user's manual

\*Please read this user guide carefully before use\*

★If you want to read the data, please use the original data cable ★  
(Other data cables may not be connected properly)

\*This machine must be charged with 5V voltage, if 9V fast charging is used, it may cause the machine to burn out\*

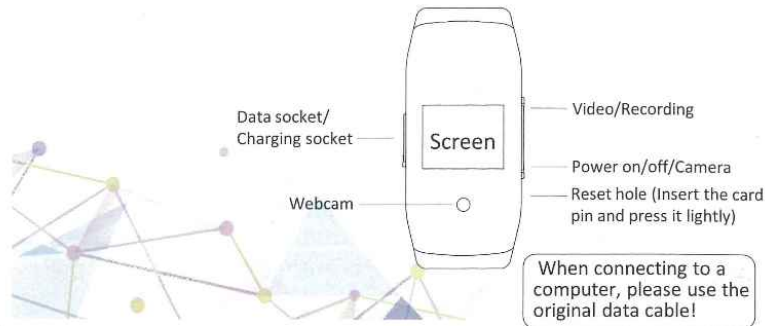

## Screen display instructions

The power off status shows:

Wed   
23:42  
2021-09-28

In this state, press the power button lightly to display the time (it goes off after 10 seconds), and other operations need to be used after the power is turned on!

Press lightly when pressing the keys, do not press the keys vigorously! By the way, because the machine will reserve a little power for use as a watch, when the power is low, you can only use the watch to light the screen. At this time, you need to charge it before use ((Don't think that the keys are not responding)!

The power on status shows:

23:42

In this state, the machine can take video/pictures/records (the corresponding mark is displayed in the upper left corner)!

## Power On

Long press the power button for 3 seconds, then enter to the power on status(automatically shut down after 15 minutes of standby).

(When connected to the charger, it will turn on automatically, and you can operate the audio, video, and camera functions directly)

**Tips:** In a well-lit environment, please aim the lens at the subject, keep a distance of more than 50cm from the subject and avoid jitter. This will result in natural colors, clear scenes, and stable images. **This product has high-definition video and large video files. When the storage is full, the files will be overwritten cyclically. Please save them in time.**

## Power Off

Long Press the power off button for 3 seconds. After releasing the hand, the screen will display the mark and enter the clock state.

## Recording function

During power on state ,  
**Recording :** long press Video/Recording button , The screen has a microphone (or triangle) icon to start recording;  
**Saving :** press Video/Recording button lightly , The microphone (or triangle) mark on the screen disappears, the recording file is saved, and returns to power on state.

## Video function

During power on state ,  
**Video:** Press the Video/Recording button, and the screen will display the round (or camera) logo to start video.  
**Saving:** Press the Video/Recording button, the screen round (or Video) logo disappears, the video has been saved, and back Power on state.

 
## Camera function

During power on state ,  
**Camera:** Press the camera button, the screen will show the photo mark then disappear, take the picture and save it, then return to the power on state.

## Format (clear data)

Formatting can be used when the machine malfunctions or needs to clear data, pay attention to back up important files!  
Steps:

1. Connect the computer through data cable,
  2. Double-click on my computer, find the machine letter,
  3. Back up the important files first,
  4. Right click on the drive letter, find the formatting option, left click,
  5. The file system selects FAT32, the allocation cell size is 32KB, as the picture shows ,
  6. Click Start, wait for the format to succeed, and exit the normal use of the machine.
- (If there is no FAT32/32KB option on the computer, you can also download the software DISKGENIUS for formatting)



## Time setting

Set the machine time and record the Video time.

Method 1 :

1. Connect the machine with the computer, find the <SET TIME.exe> in the machine;
2. Copy the file to the desktop for backup, then double click the left button to open the synchronization tool. Then click Exit to exit;
3. In the case of constant power, the modified time will be maintained, and the machine needs to be reset after a long period of time.



## Method 2 :

1. Connected the machine to the computer, found in the machine (the machine exists by default) or creates a text document (.txt) named "TIME";
2. Change the contents of the file, write it at the top, without spaces.

For example:

Original time:2017-06-12,23:59:59

Change to need time:2019-09-12,15:08:23.

Change the contents of the file as shown and turn it off after saving;

3. Disconnect the computer, the machine starts to operate immediately - after the shutdown, the system automatically reads the changed time, and keeps the modified time to walk in the case of constant power. The machine needs to be reset after a long period of no power. (After the machine system reads the time, the contents of the document will be restored to the original time: 2017-06-12, 23:59:59)



## Charging (precautions)

Can use **5V charger** or **computer** to charge. When the machine is charging, the screen displays charging; when the battery is fully charged, the battery is full and stops beating. Tip: If the machine has not been charged for a long time and the battery is too low, please use the charger to charge, otherwise you can use the computer to charge.

## Data Connections

To ensure a stable connection, please use the **original data cable** to connect to the computer. 1/ It can be connected to a computer and used as a computer camera. 2/ You can view the recorded files inside the machine. If the video cannot be played normally or freezes, you can copy the file first and download the Tencent player to play the file.

## Function parameter

Product type	Video recorder	Battery	Environmentally friendly polymer lithium battery
Recorder time	Self-synchronization	Voltage	3.7V
Charge time	around 2 hours	battery capacity	300mAh
Photo format	JPG	Photo resolution	1920*1080
Video format	AVI	Video resolution	1920*1080 30 frames/second
Lens parameter	F/NUMBER 2.25	FOV	65 degrees

## Q&A

When a problem occurs, you can insert the card pin into the reset hole first, and press the reset button lightly (you can feel the button being pressed and popped up) to solve most of the problems.

## 1/Connect to a computer or mobile phone, can not find the disk, the connection is unstable, not charging?

Please be sure to use the original data cable, otherwise the disk cannot be found and the connection is unstable. In addition, to connect the mobile phone, make sure that the mobile phone has OTG function and is turned on.

## 2/ There is no response when booting, the screen is not bright or only the time is displayed?

Because only the time function is retained when the battery is low, you should wait patiently for 2 hours before trying again.

## 3/ Poor audio and video effects, blurred?

The recording effect is better within 5 meters. The recording distance is about 2.3 meters. You can wipe the lens position before recording. Fingerprints can also cause unclearness. In addition, strong jitter can also cause blurring of the recording.

## 4/ There is no file after recording, video, and taking pictures, and there is no response to key operation when the machine is turned on?

It may be caused by a memory file system error. Please wait for the machine to run out of power, connect to the computer, and operate according to the instruction [Format] (back up important data before formatting), and correct the file system of the machine to FAT32/32KB. If no FAT32/32KB option, you need to download software DISKGENIUS for formatting operation.

## 5/Unsuccessful for time synchronization?

Follow the instruction [time setting], try the first method with a computer firstly;

If it doesn't work, you can use the second method to ensure that the file format must be correct (if the file is wrong or changed, you can delete it directly, and the TIME.txt file will be regenerated after restarting) The file is still a txt file), eject the machine on the computer or mobile phone first, and then unplug the machine to prevent unsuccessful synchronization due to file errors due to unplugging the machine directly.

## 6/Do I need to reset the time when there is no power?

The machine will reserve a little power for the watch. It can be used for about 1 week. Please charge it in time. If you have no electricity, you need to re-synchronize the time.

## 7/Can't charge by the computer?

If the machine has not been charged for a long time, resulting in a very low battery, please use the charger to charge, otherwise you can use the computer to charge.

## 8/The video playback effect is not good.

Please copy the video file to your computer or mobile phone and play it. In addition, you can download the Tencent player for better playback effect.

## 9/ The file recorded before is missing?

This product has high-definition camera and large video files. 8GB can save about 50 minutes of video (other capacity can be calculated). When it is full, it will overwrite the file. Please save it in time.